

# Oxine®

## Disinfecting Solution

Oxine® provides the transportation industry a safe and convenient system to reduce the spread of blood borne pathogens and communicable infections from non-porous surfaces in passenger areas.

The proprietary blend of oxychloro chemistry of Oxine® provides disinfection by attacking the surfaces of microbes and breaking them down. It works immediately on contact, and remains working until dried. No residual active compound is left behind so no rinsing is required. Oxine® is also an excellent deodorizer.

Oxine® is designed to be diluted with a fixed amount of water to create an affordable yet effective sanitizer that can be used daily, or more often on problem contact areas or in special target areas.

The simple system only requires that the included activator be mixed with the Oxine® concentrate in its container. After a few seconds of mixing, the activated concentrate is then added to tap water as directed. It is then ready to go to work solving your sanitation challenges.



Oxine® meets EPA's emerging viral pathogen requirements and is approved for use against SARS-CoV2, the Corona Virus that caused the Covid-19 disease. Areas for disinfection and odor control, where Oxine® is used include:

- Restrooms
- Non-porous seats
- Public areas
- Hand Rails
- Lounge

Oxine® is often used to treat chairs, beds, benches, floors, walls, restrooms, showers, water baths, whirlpools, laundry and a broad range of other applications.



### Concentrate Properties:

- Concentration: 2.00 – 2.10% available chlorine dioxide
- pH: 8.2 – 8.5
- Solubility in Water: Complete
- Very Low Acute Toxicity (EPA CAT III)
- Non-Flammable, Non-Explosive, Stable Solution

### Application Directions:

Refer to product label and SDS for proper PPE and detailed mixing instructions.

For every 3.25 oz of Oxine® concentrate, mix 10 grams of Oxine® activator crystals. Let stand for 5 minutes and add to one gallon of clean water. Final solution is 500 ppm.

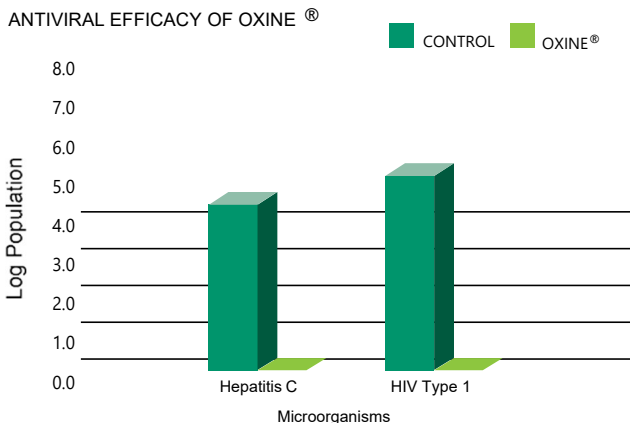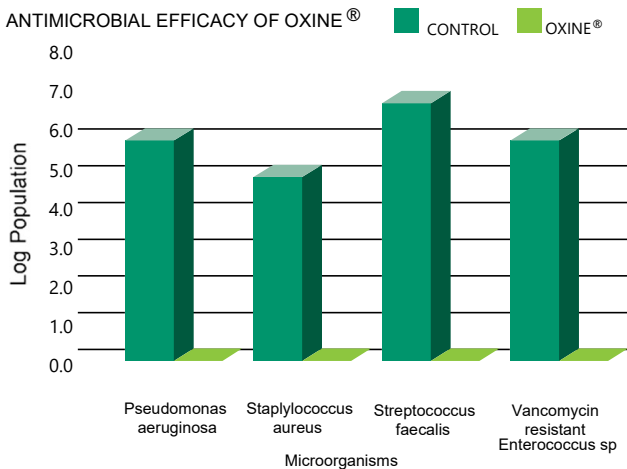

[www.AeroSafe.com](http://www.AeroSafe.com)

4405 International Blvd. Suite B-116  
Norcross, GA. 30093

770.590.8863

[Sales@AeroSafe.com](mailto:Sales@AeroSafe.com)